



**RF/MICROWAVE**

**Antenna Cables**

**TAIWANGAST INC.**

2F, No.27, Jhong-Rong St., Sin-Jhuang City, Taipei County 242, Taiwan

TEL. 886 2 8994 1601, FAX. 886 2 8994 1602

sales@rfconnector.com.tw, www.rfconnector.com.tw

# General Information


<b>SMA</b>	<b>Subminiature Connectors Screw Lock</b>	<b>50 Ω</b>	<b>18 GHz</b>
<b>SMB</b>	<b>Subminiature Connectors</b>	<b>50 Ω</b>	<b>4 GHz</b>
	<b>Snap Lock</b>	<b>75 Ω</b>	<b>3 GHz</b>
<b>MCX</b>	<b>Microax Connectors</b>	<b>50 Ω</b>	<b>6 GHz</b>
	<b>Snap Lock</b>	<b>75 Ω</b>	<b>3 GHz</b>
<b>MMCX</b>	<b>Miniature Microax Connectors Snap Lock</b>	<b>50 Ω</b>	<b>6 GHz</b>
<b>N</b>	<b>Coaxial Connectors</b>	<b>50 Ω</b>	<b>11 GHz</b>
	<b>Screw Lock</b>	<b>75 Ω</b>	<b>1.5 GHz</b>
<b>TNC</b>	<b>Coaxial Miniature Connectors</b>	<b>50 Ω</b>	<b>11 GHz</b>
	<b>Screw Lock</b>	<b>75 Ω</b>	<b>1 GHz</b>
<b>BNC</b>	<b>Coaxial Miniature Connectors</b>	<b>50 Ω</b>	<b>4 GHz</b>
	<b>Bayonet Lock</b>	<b>75 Ω</b>	<b>1 GHz</b>
<b>FME</b>	<b>Coaxial Miniature Connectors Screw Lock</b>	<b>50 Ω</b>	<b>3 GHz</b>
<b>F</b>	<b>Coaxial Connectors Screw Lock</b>	<b>75 Ω</b>	<b>1 GHz</b>
<b>1.6/5.6</b>	<b>Coaxial Connectors Screw Lock</b>	<b>75 Ω</b>	<b>1 GHz</b>
<b>7/16</b>	<b>Coaxial Connectors Screw Lock</b>	<b>50 Ω</b>	<b>7.5 GHz</b>
<b>Adaptors</b>	<b>Between Series</b>		

## **TAIWANCAST INC.**

2F, No.27, Jhong-Rong St., Sin-Jhuang City, Taipei County 242, Taiwan

TEL. 886 2 8994 1601, FAX. 886 2 8994 1602, sales@rfconnector.com.tw, www.rfconnector.com.tw

# RF Connector Number Legend

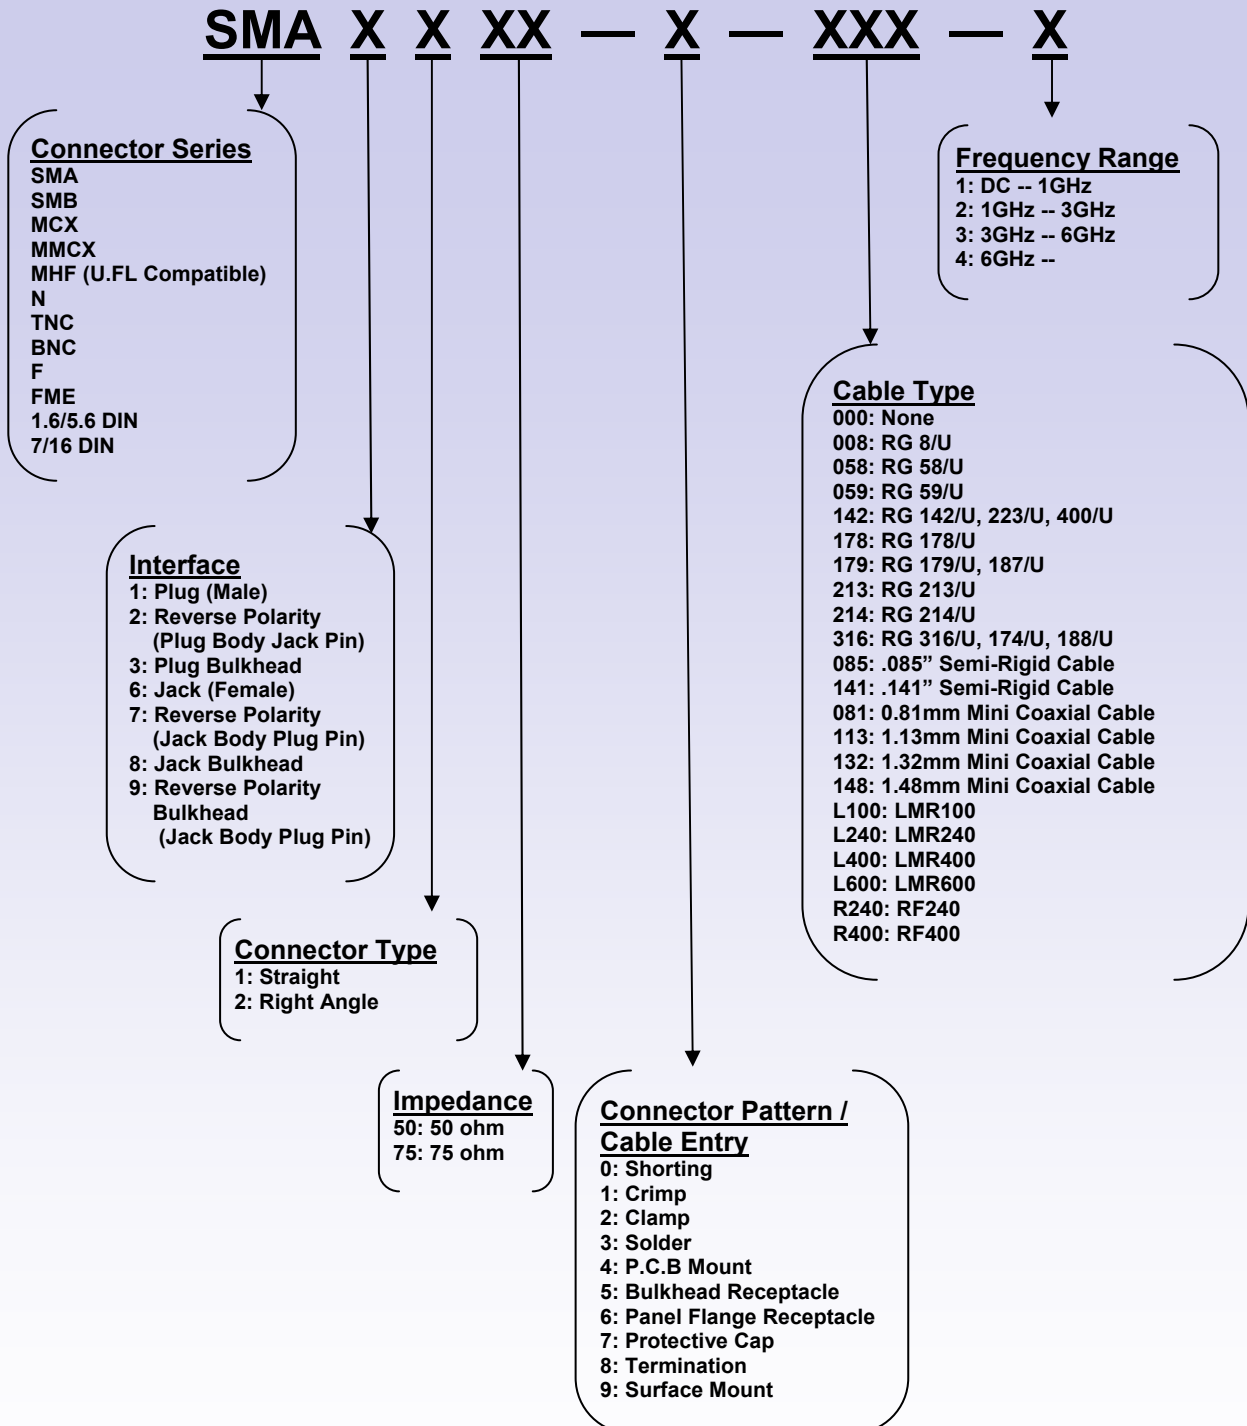


## TAIWANCAST INC.

2F, No.27, Jhong-Rong St., Sin-Jhuang City, Taipei County 242, Taiwan

TEL. 886 2 8994 1601, FAX. 886 2 8994 1602, sales@rfconnector.com.tw, www.rfconnector.com.tw

# RF Adapter Number Legend

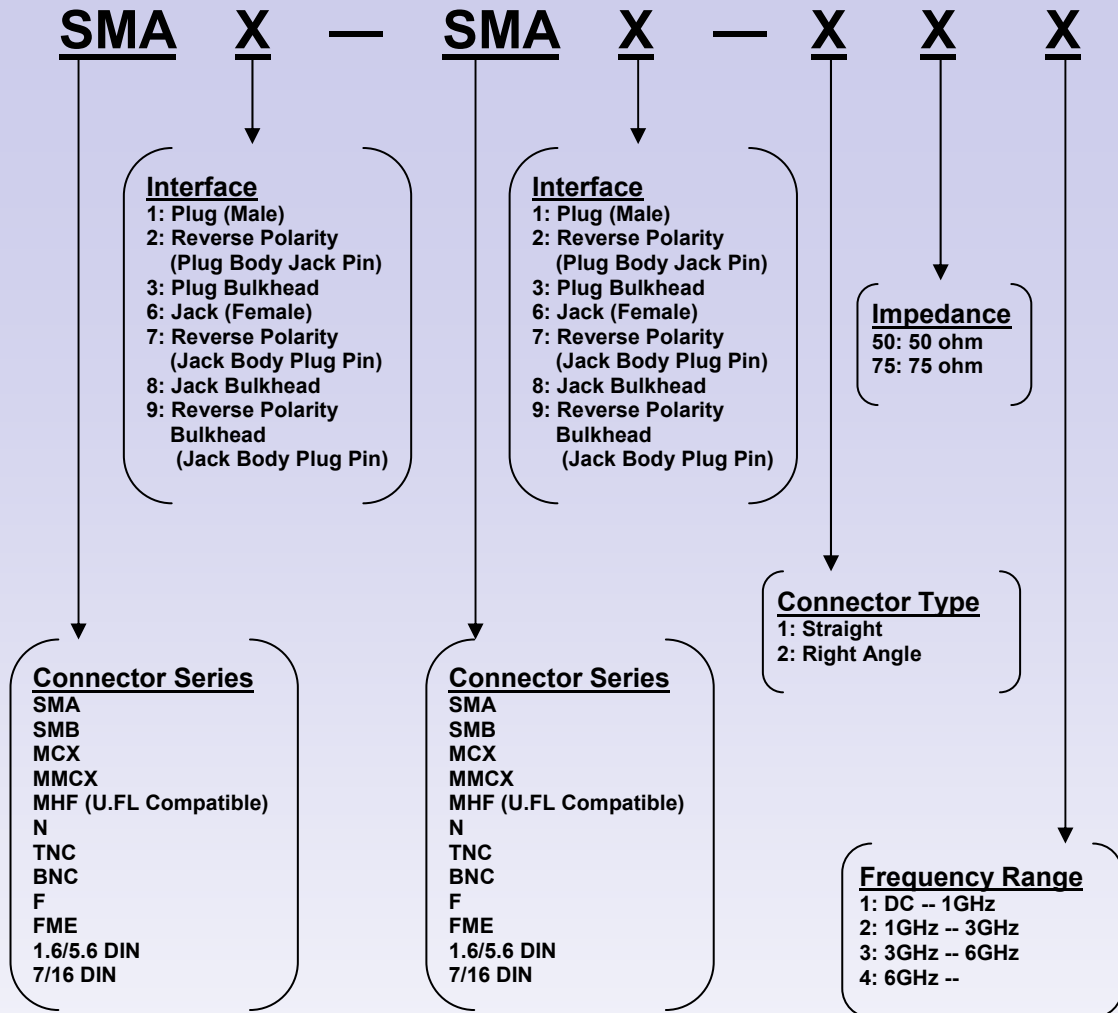


## TAIWANCAST INC.

2F, No.27, Jhong-Rong St., Sin-Jhuang City, Taipei County 242, Taiwan

TEL. 886 2 8994 1601, FAX. 886 2 8994 1602, sales@rfconnector.com.tw, www.rfconnector.com.tw

# RF Cable Assembly Number Legend

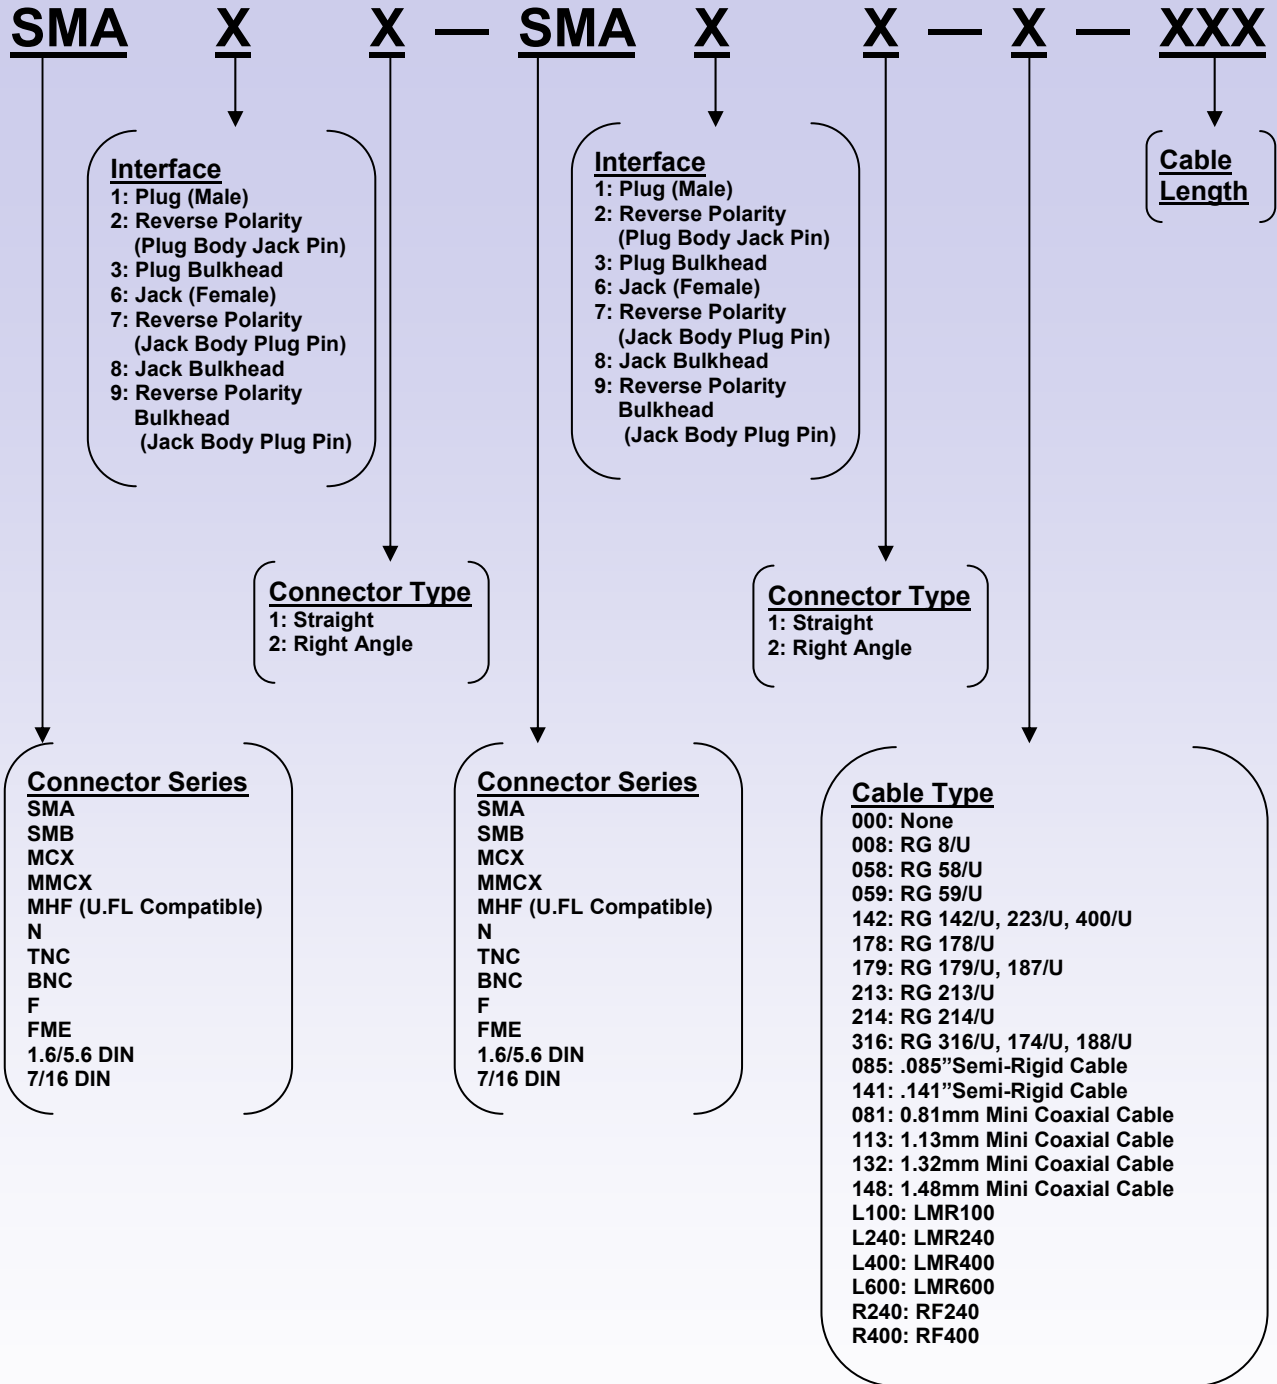

## TAIWANCAST INC.

2F, No.27, Jhong-Rong St., Sin-Jhuang City, Taipei County 242, Taiwan

TEL. 886 2 8994 1601, FAX. 886 2 8994 1602, sales@rfconnector.com.tw, www.rfconnector.com.tw

# ANTENNA CABLES

**BNC STR. PLUG TO  
SMA STR. PLUG  
FOR LMR SERIES CABLE**




**BNC STR. JACK TO  
BNC STR. PLUG  
FOR LMR SERIES CABLE**



**BNC STR. JACK BULKHEAD TO  
MHF (I-PEX)  
FOR MINI COAXIAL SERIES CABLE**



**BNC ANTENNA CABLE SERIES**

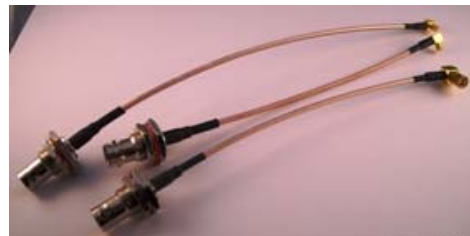

**FAKRA CABLES**



**FME STR. PLUG BULKHEAD TO  
MHF (I-PEX)  
FOR MINI COAXIAL SERIES CABLE**



**TAIWANCAST INC.**

2F, No.27, Jhong-Rong St., Sin-Jhuang City, Taipei County 242, Taiwan

TEL. 886 2 8994 1601, FAX. 886 2 8994 1602, sales@rfconnector.com.tw, www.rfconnector.com.tw

# ANTENNA CABLES

## FME RG174 CABLES



## MCX R/A PLUG TO F STR. JACK BULKHEAD FOR RG179 CABLE



## MCX R/A PLUG TO SMB STR. PLUG FOR LMR SERIES CABLE



## MHF (I-PEX) TO MHF (I-PEX) FOR RG178 CABLE



## MHF (I-PEX) 0.81MM CABLES



## MHF (I-PEX) 1.13MM CABLES



## **TAIWANCAST INC.**

2F, No.27, Jhong-Rong St., Sin-Jhuang City, Taipei County 242, Taiwan

TEL. 886 2 8994 1601, FAX. 886 2 8994 1602, sales@rfconnector.com.tw, www.rfconnector.com.tw

# ANTENNA CABLES

## MHF (I-PEX) 1.32MM CABLES



## MHF (I-PEX) TO SMA FOR MINI COAXIAL CABLE SERIES



## MHF (I-PEX) TO SMA FOR RG178 CABLE SERIES



## MMCX ANTENNA CABLE SERIES



## N TYPE STR. JACK BULKHEAD TO MHF (I-PEX) FOR RG178 CABLE



## SMA STR. JACK BULKHEAD TO SMA STR. PLUG FOR LMR SERIES CABLE



## **TAIWANCAST INC.**

2F, No.27, Jhong-Rong St., Sin-Jhuang City, Taipei County 242, Taiwan

TEL. 886 2 8994 1601, FAX. 886 2 8994 1602, sales@rfconnector.com.tw, www.rfconnector.com.tw

# ANTENNA CABLES

**SMA STR. JACK BULKHEAD TO  
TNC STR. PLUG REVERSE POLARITY  
FOR LMR SERIES CABLE**



**SMB ANTENNA CABLE SERIES**



**TNC STR. JACK BULKHEAD TO  
MHF (I-PEX)  
FOR 0.81MM CABLE**



**UFL (HIROSE) MINI COAXIAL CABLES**



**TAIWANCAST INC.**

2F, No.27, Jhong-Rong St., Sin-Jhuang City, Taipei County 242, Taiwan

TEL. 886 2 8994 1601, FAX. 886 2 8994 1602, sales@rfconnector.com.tw, www.rfconnector.com.tw